

User manual

MANUEL D'UTILISATION
GEBRUIKSAANWIJZING
GEBRAUCHSANWEISUNG
MANUALE DI ISTRUZIONI
MANUAL DE INSTRUCCIONES
INSTRUKCJA OBSŁUGI
NÁVOD K OBSLUZE

Trigo T



Preface	4
1. Your product	5
1.1. Options	6
2. Before use	6
2.1. Intended use and indications	6
2.2. Safety instructions and applicable risks	7
2.3. Symbols on the wheelchair	8
2.4. Transport	9
2.5. Folding/Unfolding	12
2.6. Storage	14
3. Using your wheelchair	14
3.1. Operating the brakes	14
3.2. Moving to/from the wheelchair	16
3.3. Options	17
3.4. Comfort adjustments	18
3.5. Riding the wheelchair	22
4. Maintenance	27
4.1. Points of maintenance	27
4.2. Maintenance instructions	28
4.3. Troubleshooting	29
4.4. Expected lifespan	30
4.5. Reuse	30
4.6. End of use	30
4.7. Warranty	30
5. Technical specifications	31

Preface

Congratulations! You are now owner of a Vermeiren wheelchair!

This wheelchair is made by qualified and committed personnel. It is designed and produced according to high quality standards, guarded by Vermeiren.

Thank you for your trust in the products of Vermeiren. To support you on the use of this wheelchair and its operating options, this manual is offered. Please read it carefully; it will help you to get familiar with the operation, capabilities and limitations of your wheelchair.

If you still have questions after reading this manual, do not hesitate to contact your specialist dealer. He/she will be glad to help you.

Important note

To ensure your safety, and to prolong the lifetime of your product, please take good care of it and have it checked and serviced on a regular basis.

This manual reflects the latest product developments. Vermeiren has the right to implement changes to this type of product without any obligation to adapt or replace similar products previously delivered.

Pictures are used to clarify the instructions in this manual. Details of the depicted product may deviate from your product.

Information available

On our website <http://www.vermeiren.com/> you will always find the most recent version of the information in this manual. Please consult this website regularly for possible updates.

Visually impaired people can download the electronic version of this manual and have it read out by means of a text-to-speech software application.

	User manual For user and specialist dealer
	Installation instructions For specialist dealer
	Service manual for wheelchairs For specialist dealer
	EC declaration of conformity

1. Your product



1. Handgrips
2. Backrest
3. Side plate / Armrest
4. Seat
5. Footrests
6. Footplates
7. Front wheels
8. Brakes

9. Rear wheels
10. Hand rims
11. Identification plate

1.1. Options

Contact your specialist dealer about options. He will gladly advise you.

2. Before use

2.1. Intended use and indications

- This product is a medical device.
- Indications and contraindications: This wheelchair is intended to be operated by the user sitting in the wheelchair, or it can be pushed by an attendant if push handles are provided. The wheelchair is intended for young people with reduced or no walking abilities, and adult or elderly people with walking difficulties or no walking abilities. You should NOT use this wheelchair if you suffer from physical or mental impairments that may put you, or other people, in danger when riding the wheelchair. For this reason, consult your doctor first and make sure that your specialist dealer is informed about his advice.
- This wheelchair is designed and produced solely to transport/transfer one (1) person with a maximum weight as specified in §5.. It is not designed for transportation of goods or objects, nor for any use other than previously described.
- This wheelchair is suitable for indoor and outdoor use.
- Only use accessories and spare parts approved by Vermeiren.
- Please read all technical details and limits of your wheelchair in chapter 5..
- The warranty on this product is based on normal use and maintenance as described in this manual. Damage to your product caused by improper use or lack of maintenance will cause the warranty to lapse.

2.2. Safety instructions and applicable risks

CAUTION

Risk of injuries and/or damage

- Carefully read and follow the instructions in this manual. Otherwise you may get injured or your wheelchair may get damaged.

Keep the following general warnings in mind during use:

- Do not use your wheelchair if you are under influence of alcohol, medicines or other substances that may influence your driving abilities.
- Be aware that some parts of your wheelchair may get very hot or cold due to ambient temperature, solar radiation or heating devices. Be careful when touching. Wear protective clothing if the weather is cold. When going outdoors, riding gloves can be used to improve the grip on the hand rims.
- Alterations or substitutions should not be made to the wheelchair securement points or to structural and frame parts or components without consulting the wheelchair manufacturer.
- If the packaging of your product has been damaged, (unintentionally) opened, or affected by environmental conditions (moisture, heat,...) upon delivery, check the device integrity of your product. When in doubt, contact your specialist dealer.

Be aware that your wheelchair may interfere with some types of anti-theft systems, depending on the settings used. This may cause the shop's alarm to go off.

Any serious incident [MDR (EU) 2017/745 §2 (65)] that has occurred in relation to the device should be reported to the manufacturer and the competent authority of the Member State in which the user and/or patient is established.

2.3. Symbols on the wheelchair

	Type designation
	Catalogue number
	Serial number
	Medical device
	Manufacturer
	Date of manufacture
	Declaration of conformity
	Attention: important information
	It is advised to read the manual
	Risk of entrapment
	Maximum weight of the user in kg
	Maximum safe slope in ° (degrees).
	Not intended to be used as a seat in a motor vehicle
	Crash-tested product ; can be used as a seat in a motor vehicle
	Can be used as a seat in a motor vehicle ; indicates attachment points

2.4. Transport

2.4.1. Transport by vehicle, as luggage

⚠ CAUTION

Risk of injuries

- Make sure that the wheelchair is attached properly to avoid injury from the passengers during collision or sudden braking.
 - NEVER use the same seatbelt to secure the wheelchair and passenger.
1. As the wheelchair user, transfer to a car seat, see §3.2..
 2. Fold the wheelchair to its most compact size according to the instructions in §2.5.1..
 3. Store loose parts in a safe place.
 4. Place the wheelchair in the luggage compartment.
 5. If the luggage and passenger compartments are NOT separated, attach the frame of the wheelchair securely to the vehicle. You can use the available safety belts in the vehicle.

2.4.2. Use of the wheelchair as seat in a motor vehicle (only for Trigo with fixed backrest)

⚠ WARNING

Risk of injuries

- For Trigo with foldable/angle adjustable backrest: Do NOT use your wheelchair as a seat in a vehicle, see the following symbol.



- The wheelchair has passed the crash test of ISO 7176-19: 2022 and, as such, has been designed and tested for use only as forward-facing seat in a motor vehicle.
- The wheelchair's pelvic belt alone is not suited as an occupant restraint belt.
- Use the wheelchair's pelvic belt and the applicable three-points belt in the vehicle to prevent head and chest impacts with the vehicle.

- Do not use postural supports to restrain the user in the vehicle unless they are labelled as being in accordance with the requirements specified in ISO 7176-19:2022.
- Following involvement in any type of vehicle collision, have your wheelchair inspected by the specialist dealer or manufacturer's representative before reuse.

The wheelchair is tested using the four-point strap-tie system and a 3-point occupant-restraint system.

Whenever feasible, use the seat of the vehicle and store the wheelchair in the cargo area.

2.4.2.1. Steps to secure the wheelchair in a motor vehicle:

1. Check that the vehicle is equipped with a suitable wheelchair tie down and occupant-restraint system, conform ISO 10542.
2. Check that the components of the wheelchair tie down and occupant restraint system are not frayed, contaminated, damaged or broken.
3. If equipped with an adjustable seat and/or back tilt, make sure that the wheelchair user is sitting as upright as possible. If the user's condition prevents this, a risk assessment should be done to evaluate the user's safety during transit.
4. Remove all mounted accessories such as trays and respiratory equipment, and secure them in a safe place.
5. Position the wheelchair facing forward in the travelling direction, centrally between the tie-down rails mounted in the floor of the vehicle.
6. Mount the front securement straps according to the instructions of the strap-system manufacturer at the indicated place (figure 1). This place is marked on the wheelchair with a symbol (figure 2).
7. Roll back the wheelchair until the front straps are tight.
8. Apply the wheelchair brake.
9. Mount the back securement straps according to the instructions of the strap-system manufacturer at the indicated place (figure 1). This place is marked on the wheelchair with a symbol (figure 2).



Figure 1

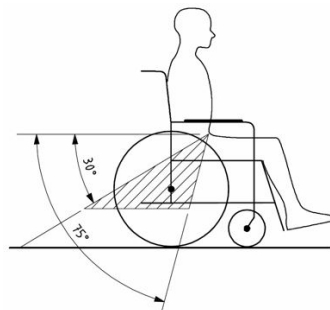


Figure 2

2.4.2.2. Steps to secure the wheelchair user:

1. Remove both armrests.
2. If present, attach the wheelchair's pelvic belt.
3. Attach the occupant restraint belts according to the instructions of the strap-system manufacturer.

- i** Wear the pelvic belt low across the front of the pelvis, so that the angle of the pelvic belt is within the preferred zone of 30° to 75° to the horizontal, similar to that shown on the image.
A steeper (greater) angle within the preferred zone is desirable.



4. Adjust the belt tightly according to the instructions of the strap-system manufacturer, consistent with the user's comfort.
5. Ensure that the restraint belt connects in a straight line to the anchor point in the vehicle and that no bends in the belt are visible, for instance at the axle of the rear wheel.
6. Install the armrests, if desired. Make sure that belts are not twisted or held away from the body by wheelchair components such as armrests or wheels.
7. Position the seatbelt buckle so that the release button will not be contacted by wheelchair components during a crash.

8. Make sure that the shoulder-belt restraints fit over the shoulders, see figure 4.

Belt restraints must not be held away from the body by wheelchair components such as armrests or wheels.

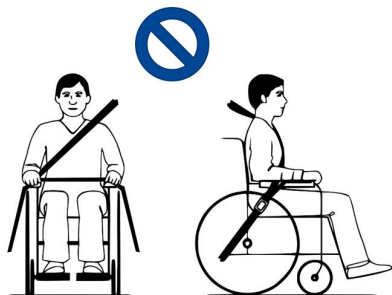


Figure 3

Belt restraints make full contact with shoulder, chest and pelvis. Pelvic belt low on the pelvis near the thigh-abdominal junction

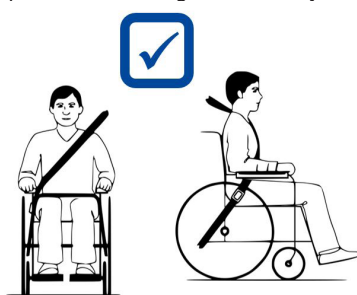


Figure 4

2.5. Folding/Unfolding

2.5.1. Folding the wheelchair

1. Pull the seat cushion off the hook-and-loop straps of the seat.
2. Remove the footrests, see §3.4.1..
3. Take the seat on the front side and backside and pull it up.




2.5.2. Unfolding the wheelchair

1. Pull the seat frame tubes (5) outwards.
2. Push both seating tubes down till they are fixed in their position.
3. Place the seat cushion on the hook-and-loop straps of the seat. Make sure that the straps of the seat cushion lie transverse over the straps of the seat.
4. Mount the footrests (§3.4.1.).

2.5.3. Mounting the rear wheels

1. Take the rear wheel and push button (1).
2. Keep the button pushed in and mount the rear wheel axle until it stops.
3. Release the button.
4. Check that the wheel is secured.

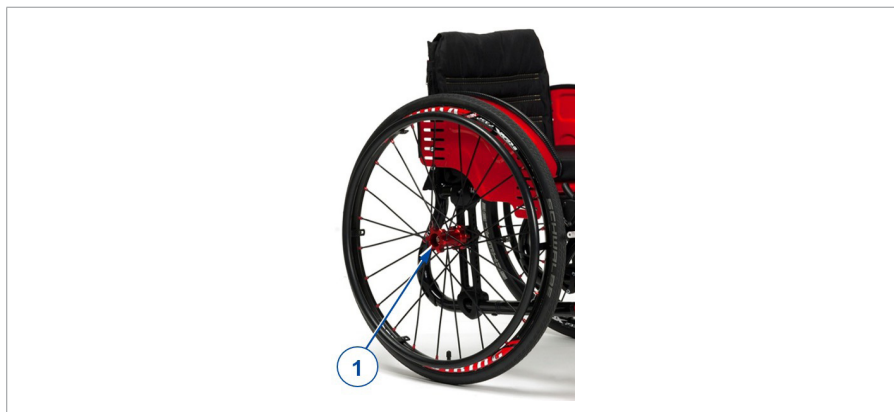

2.5.4. Taking off the rear wheels

1. Make sure the brakes are in the off position.
2. Take the wheelchair to the side frame where you want to remove the wheel.
3. Press the button in the center of the wheel hub.
4. Pull the wheel away from the frame.

2.6. Storage

CAUTION

Risk of damage

- Make sure that your wheelchair is stored in a dry environment to prevent mould from growing and the upholstery from being damaged, see also chapter 5..

3. Using your wheelchair

WARNING

Risk of injuries

- First read previous chapters and inform yourself about the intended use. Do NOT use your wheelchair unless you have read and fully understood all instructions.
- In case of doubts or questions, do not hesitate to contact your local specialist dealer, your care provider or technical adviser to help you with this.

3.1. Operating the brakes

CAUTION

Risk of injuries

- The brakes are not used to slow down the wheelchair during movements. Use the brake only to prevent the wheelchair from unintended movements.
- Good operation of the brakes is influenced by wear and contamination of the tires (water, oil, mud, ...). Check the condition of the tires before each use.
- The brakes are adjustable and can wear. Check the operation of the brakes before each use.
- Make sure the wheelchair is on a flat horizontal surface before releasing the brakes. Never release both brakes simultaneously.

3.1.1. Push-pull brakes

- i** The push-pull parking brake can be mounted in two ways (directions), to be decided upon ordering the wheelchair. Depending on the chosen direction, the brake needs to be pushed or pulled for operation.

3.1.1.1. Releasing the brakes (A)

1. With one hand, hold one of the hand rims.
2. Push or pull the brake lever (10) of the OTHER wheel.
3. Repeat this for the second wheel and parking brake.



3.1.1.2. Activating the brakes (B)

1. With one hand, hold one of the hand rims.
2. Pull or push the brake lever (10) of the OTHER wheel until you feel a distinctive click.
3. Repeat this for the second wheel and parking brake.

3.1.2. Sport brakes



3.1.2.1. To apply the brakes:

1. With one hand, hold one of the hand rims.
2. Repeat this for the second wheel and parking brake.

3.1.2.2. To release the brakes:

1. With one hand, hold one of the hand rims.
2. Repeat this for the second wheel and parking brake.

3.2. Moving to/from the wheelchair

CAUTION

Risk of injuries or damage

- In case you cannot perform the transfer in a safe manner, ask someone to assist you.
- Do not stand on the footplates.

3.2.1. Transfer

1. Position the wheelchair as close as possible to the chair, couch or bed to/from which you wish to transfer.
2. Apply both parking brakes, see §3.1..
3. Fold the footplates upwards to prevent standing on them.
4. If the transfer is on the side of the wheelchair, remove the armrest/side plate on that side (if possible).
5. Transfer to/from the wheelchair using the strength of your arms or with the help of attendant(s) or lifting equipment.

3.2.2. Sitting in the wheelchair

Some recommendations for a comfortable use of the wheelchair:

- Sit down on the seat with your lower back against the backrest.
- Make sure your upper legs are horizontal. If needed adjust the length of the footrests (see installation manual).

3.3. Options

3.3.1. Push handles

Depending on the chosen configurations, your wheelchair can be delivered without push handles, or it can be provided with normal handles, or foldable handles.

3.3.2. Armrests – Side plates

Depending on the chosen configurations, your wheelchair can be provided with a range of different armrests:

- Fixed sideplates without armrests
- Fixed sideplates with armrests
- Foldable tubular armrests
- Removable sideplates

3.4. Comfort adjustments

⚠ CAUTION


Risk of injuries or damage

- The following comfort adjustments can be done by the attendant or caretaker. All other adjustments are done by your specialist dealer according to the installation instructions, see preface.
- Always keep the swing range of the footplate in mind to prevent bystanders from being injured or objects from being damaged.
- Make sure that your fingers, clothes, buckles don't get trapped during adjustment.

3.4.1. Mounting or removing the footrests

Mounting the footrests is done as follows:

1. Hold the footrest sideways at the outside of the wheelchair's frame and mount the tube hood (1) into the frame.
2. Swing the footrest inwards until it clicks in position.
3. Swing the footplate downwards.
4. Repeat for the other footrest.

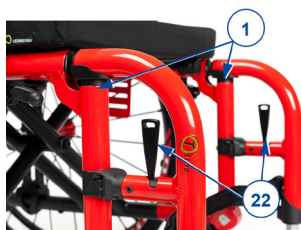


To take off the footrests:

1. Pull the lever (22) to the side.
2. Swing the footrest outward.
3. Lift the footrest to remove it.
4. Repeat for the other footrest.

3.4.2. Backrest support

The backrest of the wheelchair has a suspension system with adjustable hook-and-loop straps, to adjust the flexibility of the backrest.

1. Pull the backrest cushion from the hook-and-loop straps of the backrest.
2. Loosen the hook-and-loop straps.
3. Pull the respective strap to the desired position. The tension of the individual belts can be varied and the desired support of the back can be set.
4. Place the back cushion back over the backrest starting at the front and ending at the back.
5. Secure the hook-and-loop connections by pressing the cushion against the backrest with your hand.
6. Make sure that all straps are secured with the hook-and-loop patches.

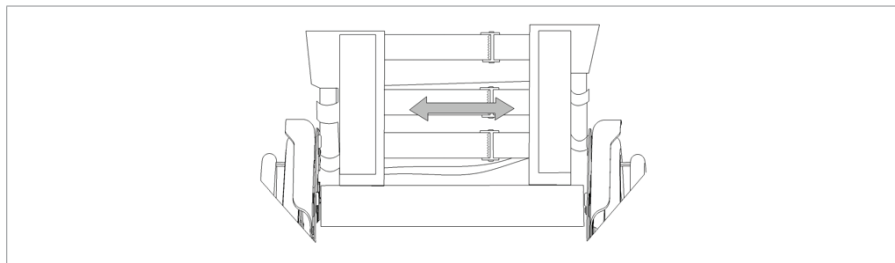

3.4.3. Foldable backrest

3.4.3.1. Folding the backrest

1. Gently pull on the back strap (1). The safety pins (2) unlock the backrest.
2. Fold the backrest forward onto the seat.



3.4.3.2. Unfolding the backrest

⚠ CAUTION

Risk of injuries

- Make sure that the backrest is securely locked before use.
1. Pull the backrest rearward until both safety pins (2) click into position.

3.4.4. Backrest height

1. Remove the backrest cushion.
2. Push the spring button located on the back of the back frame tube.
3. Move the backrest up/down to the desired height.
4. Make sure that the spring button clicks back in the corresponding hole.
5. Repeat for the other side. Make sure that both sides are set to the same height and that they are firmly secured.

3.4.5. Push handle height

Adjustment of the push handle height is available with levers (40) or star knobs (30).

1. Turn the star knob (30) or lever (40) to loosen the push handle.
2. Move the handgrip up/down to the desired height.
3. Tighten the lever or star knob to secure the push handle in place.
4. Repeat for the other side. Make sure that both sides are set to the same height and that they are firmly secured.




3.4.6. Adjusting anti-tipping (if applicable)

The anti-tipping device prevents your wheelchair from tipping over backwards. When the device is not needed, it can be swung to the side by pulling the vertical bar (16) down and turning it towards the front of the chair, until it clicks into place.

To adjust the height of the anti-tipping device according to the position and size of the rear wheels:

1. Loosen the star knob (17) until the inner tube of the anti-tipping can be moved in the support.
2. Slide the anti-tipping up/down until the desired position.
3. Retighten the star knob.

The anti-tipping should be approximately 15-20mm above the ground.

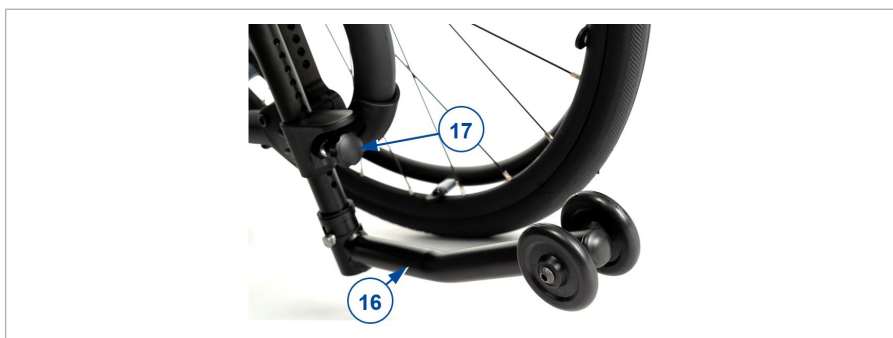

3.5. Riding the wheelchair

CAUTION

Risk of entrapment

- Prevent your fingers from being caught by the wheel spokes.
- Prevent entrapment of your hands on the hand rims when you pass small passages.
- When driving with an attendant, keep your arms away from the wheels and keep your feet on the footplates.

CAUTION

Risk of injuries or damage

- Do NOT drive on slopes, obstacles, steps or kerbs larger than specified in § 5..
- Do not proceed with your wheelchair in traffic. Always stay on the pavement.
- Do not operate the hand rims with wet hands.
- Pay attention if the road has holes or gaps that may cause entrapment of the wheels.
- Avoid stones and other objects that may block the wheels.
- Always keep the swing range of the footplate in mind to prevent bystanders from being injured or objects from being damaged.
- Before every usage, make sure that:
 - all adjustments are firmly secured, see §3.4..
 - the parking brakes are working properly.
 - the tires are in good condition, see §4.2.1..

3.5.1. Riding on your own


1. Release the parking brakes one by one, see §3.1..
2. Move your hands to the highest position on both hand rims.
3. Lean forward and push the hand rims forward until your arms are straight.
4. Swing your arms loosely back to the topside of the hand rims and repeat the push movement.
5. To stop: wait until the wheelchair stops and move forward/backward by operating the hand rims. Apply the parking brakes one by one, see §3.1..

3.5.2. Riding on slopes

⚠ CAUTION

Risk of injuries

- When you stop on a (small) slope, use your brakes.
- If the attendant has too little strength to control the wheelchair, stop riding and use the brakes immediately.

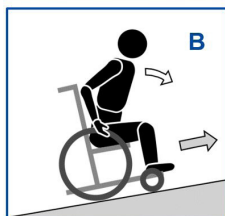

1. Secure yourself in the wheelchair with a safety belt.
2. Ask an attendant or a bystander to help you.
3. Drive slowly and in a straight line. Lean slightly forward (A/B) when going up the slope. Lean backwards, against the backrest, when going down the slope.
4. Never reverse on a slope.

3.5.3. Using ramps

⚠ CAUTION

Risk of tipping over

- Only use ramps approved by Vermeiren and do not exceed their maximum load.
- Make sure that the wheelchair does not touch the ground or ramp due to the inclination of the wheelchair.
- Only negotiate ramps with the help of one or two attendants.

Follow the instructions in **§3.5.2..**

3.5.4. Using stairs

⚠ CAUTION

Risk of tipping over

- Stairs should always be negotiated with the help of two attendants.
- Never try to use stairs that are not appropriate for wheelchairs.



1. One attendant tips the wheelchair slightly backwards by the handles.
2. The second attendant grabs the wheelchair at the front of the frame, on both sides of the wheelchair.
3. Stay calm, avoid sudden movements and keep your arms inside the wheelchair.
4. Both attendants lift and pull the wheelchair from step to step while the rear wheels roll over the steps.

3.5.5. Coping with obstacles

⚠ CAUTION

Risk of tipping over

- If you do not have enough experience with your wheelchair, ask assistance of an attendant.
- Make sure that the footplates do not touch ground while taking an obstacle.
- Do not use your wheelchair on an escalator.
- If available, wear your safety belt.

3.5.5.1. Small kerbs (up or down)

These can be taken forward (E / F) with one attendant, or by experienced wheelchair users alone.



1. The attendant moves the wheelchair forward approaching the kerb. Make sure the footplates won't touch the kerbs.
2. Lean backwards to reduce the pressure on the front wheels.
3. The attendant holds the handles firmly while moving forward. If necessary he uses the tipping aid to keep the front wheels lifted until they have passed the kerb rim.
4. The attendant releases the pressure on the handles and tipping aid to gently put the front wheels on the ground.
5. Next, he holds the handles firmly while pushing the wheelchair with the rear wheels up/down the kerb.

A practiced user can negotiate small kerbs forward by himself:



Going down:

1. Bring balance on the rear wheels to reduce the pressure on the front wheels.
2. Negotiate the kerb.



Going up:

1. Drive until the kerb.
2. Lean backwards so you are balancing on the rear wheels.
3. Roll the front wheels balancing over the kerb.
4. Bend forwards for more stability.
5. Roll the rear wheels over the kerb.

3.5.5.2. Medium kerbs (up or down)

These should be taken backwards with one attendant:

	1. The attendant reverses the wheelchair so that rear wheels approach the kerb first (G / H). 2. Going down: Lean forward (G) to move your centre of gravity to the front. Going up: Lean backward (H) to move your centre of gravity to the back. 3. The attendant pulls the wheelchair gently from/on the kerb.
	

3.5.5.3. Higher kerbs

Higher kerbs, but below maximum size, see §5., should be taken with help of two attendants.

Going down:

1. Remove the footrests.
2. The attendant moves the wheelchair forward approaching the kerb.
3. Lean backwards to reduce the pressure on the front wheels.
4. The attendant holds the handles firmly and uses the tipping aid to keep the front wheels lifted until they have passed the kerb rim.
5. The second attendant grabs the front of the frame and moves backwards while pulling the rear wheels down the kerb.
6. The first attendant releases the pressure on the handles and tipping aid to put the front wheels on the ground.

Going up:

1. Remove the footrests.
2. The first attendant reverses the wheelchair so that rear wheels approach the kerb first.

3. Lean backward to move your centre of gravity to the back.
4. The second attendant grabs the front of the frame and moves forward while pulling/pushing the rear wheels on the kerb. The first attendant lifts and holds the handles firmly to prevent the wheelchair from tipping over.

4. Maintenance

- i** Regular care ensures that your wheelchair is preserved in a perfectly functional condition. For the maintenance manual, refer to the Vermeiren website: www.vermeiren.com.

4.1. Points of maintenance

⚠ CAUTION

Risk of injuries and damage

- Repairs and replacements may only be undertaken by trained persons and only genuine replacement parts of Vermeiren should be used.
- i** The last page of this manual contains a registration form for the specialist dealer to record each service.
The service frequency depends on the frequency and intensity of use.
Contact your dealer to agree to a common timetable for inspection/maintenance/repair.

4.1.1. Before each use

Inspect the following points:

- All parts: Present and undamaged or unworn.
- All parts: Clean, see § 4.2.2..
- Wheels, backrest, seat, calf rests, arm rests, footplates: Well secured.
- Condition of wheels/tyres, see § 4.2.1..
- Condition of frame parts: No deformation, instability, weakness or loose connections.

- Seat, backrest, arm pads, calf pads and head rest (if applied): No excessive wear (like dented spots, damage or tears).
- Brakes: Undamaged and functioning.

Contact your specialist dealer for possible repairs or part replacements.

4.1.2. Yearly or more often

Have your wheelchair inspected and serviced by your specialist dealer, at least once a year, or more often. The minimum maintenance frequency depends on use and should therefore be commonly agreed upon with your specialist dealer.

4.1.3. If stored

Make sure that your wheelchair is stored in a dry environment to prevent mould from growing and the upholstery from being damaged, see also chapter 5..

4.2. Maintenance instructions

4.2.1. Wheels and tyres

-  Proper working of the brakes depends on the state of the tyres, and can change due to wear and contamination (water, oil, mud, ...).

Keep your wheels free of wires, hair, sand and fibres.

Check the profile of the tyres. If the tread depth is less than 1 mm, the tyres need to be replaced. Contact your specialist dealer for this matter.

Inflate each pneumatic tyre to the correct pressure (see pressure indication on the tyres).

For instructions on how to change the tyres, see the installation manual.

4.2.2. Cleaning

CAUTION

Risk of damage by moisture

- Never use a hose or high-pressure cleaner to clean the wheelchair.

Wipe all rigid parts with a damp cloth (not drenched). If necessary, use a mild soap, suitable for varnishes and synthetics.

The upholstery can be cleaned with lukewarm water and a mild soap. Do not use abrasive cleaning agents to clean.

4.2.3. Disinfection

CAUTION

Risk of damage

- Disinfections may only be undertaken by trained persons. Consult your specialist dealer.

4.3. Troubleshooting

Even if you use your wheelchair properly, a technical problem may occur. In this case, contact your local specialist dealer.

WARNING

Risk of injuries and damage

- NEVER attempt to repair your wheelchair yourself.

The following symptoms may indicate a serious problem. Therefore always contact your specialist dealer if you spot any of the following deviations:

- Strange sound;
- Uneven tread wear on one of the tyres;
- Jerky movements;
- Wheelchair deflects to one side;
- Damaged or broken wheel assemblies.

4.4. Expected lifespan

The wheelchair is designed to have an average lifespan of 5 years. Depending on the frequency of use, driving circumstances and maintenance, the lifespan of your wheelchair will increase or decrease.

4.5. Reuse

Before each reuse, have the wheelchair disinfected, inspected and serviced according to the instructions in § 4.1. and § 4.2..

4.6. End of use

At end of life, you need to dispose your wheelchair according to the local environmental legislation. The best way to do so, is to disassemble the wheelchair to facilitate the transport of recyclable parts.

4.7. Warranty

The warranty on this product is subject to the general terms and conditions of each country.

5. Technical specifications

The technical details below are only valid for this wheelchair, at standard settings and optimal ambient conditions. Take these details into account during use. The values are no longer applicable if your chair has been modified, damaged, or is severely worn.

Brand	Vermeiren
Product group	Manual wheelchair
Type	Trigo T
Description	Dimensions
Maximum user weight	
For seat width up to 360 mm, with single cross	70 kg
For seat width 360 mm onwards, with 1,5 or double cross	130 kg
Overall length	676 mm - 1046 mm
Dismantled length (wheels dismantled)	650 mm - 855 mm
Overall width (camber 0°, depending on seat width)	460 mm - 660 mm
Dismantled width (wheels dismantled)	386 mm - 586 mm
Overall height (depending on rear wheel type, adjustments, push handle and backrest height)	457 mm - 945 mm
Folded height	457 mm - 660 mm
Total mass	> 10 kg
Mass of heaviest part	7,2 kg
Mass of removable parts	
Rear wheel 24"	3,1 kg
Footrests	0,65 kg
Rated slope	5°
Seat plane angle	0° - 12°
Effective seat depth	320 mm - 500 mm
Effective seat width	300 mm - 500 mm
Seat surface height at front edge, depending on front wheels	(in steps of 10 mm)
3"	380 - 470 mm
4"	390 - 490 mm
5"	410 - 500 mm
6"	430 - 510 mm

Brand	Vermeiren
Product group	Manual wheelchair
Type	Trigo T
Description	Dimensions
Seat surface height at rear edge, depending on rear wheels	(in steps of 10 mm)
18"	315 - 415 mm
20"	335 - 435 mm
22"	355 - 465 mm
24"	385 - 495 mm
26"	405 - 515 mm
Backrest angle	82° - 86° - 90° - 94° - 98° - 102°
Backrest height	
Foldable	270 - 510 mm
Foldable and height-adjustable	300 - 550 mm
Angle-adjustable and height-adjustable	300 mm - 500 mm
Angle-adjustable	350 - 510 mm
Fixed and height-adjustable	250 - 500 mm
Fixed	250 - 510 mm
Footplate to seat distance	240 - 460 mm
Leg to seat surface angle	Fixed, 70° or 80° or 90°
Horizontal location of axle (deflection)	35 mm - 83 mm
Minimum turning diameter	790 mm - 1140 mm
Diameter of rear wheels	18" 20" 22" 24" 26"
Tyre pressure rear wheels	2,5 - 10 bar
Rear wheel camber	0° 2° 4° 6°
Handrim diameter	400 mm 440 mm 500 mm 535 mm 600 mm
Diameter of front wheels	3" 4" 5" 6"

Brand	Vermeiren
Product group	Manual wheelchair
Type	Trigo T
Description	Dimensions
Use temperature	+5°C - +41°C
Storage and use humidity	30% - 70%
We reserve the right to introduce technical changes. Measurement tolerance +/- 15 mm / 1,5 kg / 1,5°	



Service registration form

This product (name):
was inspected (I), serviced (S), repaired (R) or disinfected (D):

By (stamp): Kind of work: I / S / R / D Date:	By (stamp): Kind of work: I / S / R / D Date:	By (stamp): Kind of work: I / S / R / D Date:
By (stamp): Kind of work: I / S / R / D Date:	By (stamp): Kind of work: I / S / R / D Date:	By (stamp): Kind of work: I / S / R / D Date:
By (stamp): Kind of work: I / S / R / D Date:	By (stamp): Kind of work: I / S / R / D Date:	By (stamp): Kind of work: I / S / R / D Date:
By (stamp): Kind of work: I / S / R / D Date:	By (stamp): Kind of work: I / S / R / D Date:	By (stamp): Kind of work: I / S / R / D Date:
By (stamp): Kind of work: I / S / R / D Date:	By (stamp): Kind of work: I / S / R / D Date:	By (stamp): Kind of work: I / S / R / D Date:



VERMEIREN GROUP

Vermeirenplein 1/15

2920 Kalmthout

Belgium

www.vermeiren.com

Version: G, 2026-07

Basic UDI-DI: 5415174122106TrigoTTX

All rights reserved, including translation.

VERMEIREN
we care **for** you